



Modern Systems



Modern Systems



Conventional Systems




Engine info

- Over 120 FAS with active SNR
- Applications vary from marine, ships, gensets, agriculture and mining applications



Engine series

28/33 D Series
20/27 Series
32/40 Series
51/60 Series
D 0800 Series
D 2500 Series
D 2800 Series
R-Series
V-Series

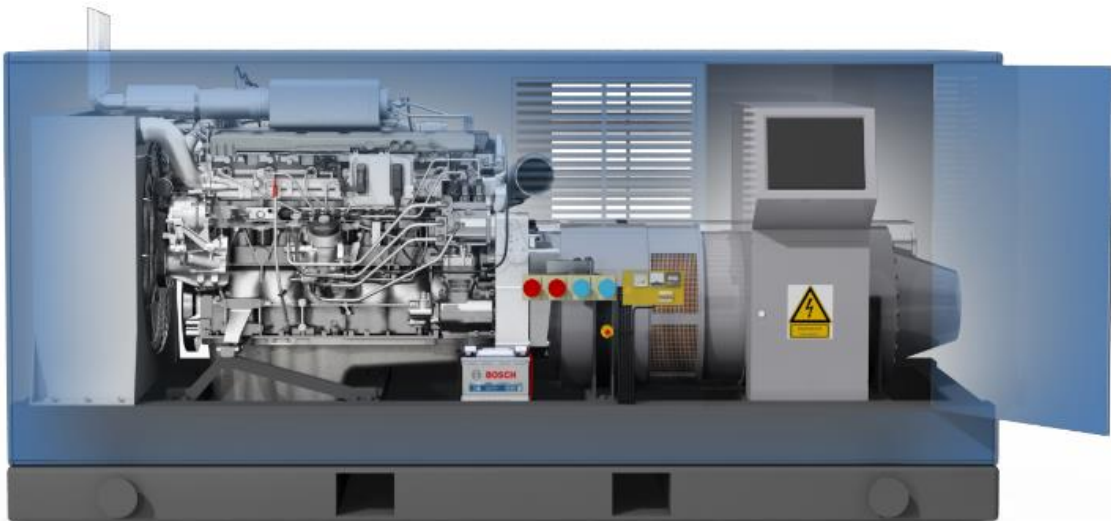




Cross Reference

OEM number	IAM number	BX Number	OEM number	IAM number	BX Number
11 20008 0043	0414971032		51 10101 7315	0432131857	0986430321
11 20008 0051	0414971036		51 10101 7338	0432131831	0986430228
11 20008 0123	F00BL0P134		51 10101 7339	0432133872	
11 20501 0012	F00BC00111		51 10101 7349	0432131820	0986430257
11 20501 0013	F00BC00112		51 10102 0125	0433271285	
11 22004 0054	0433250047		51 10102 0143	0433271296	
11 22103 0077	0431216003		51 10102 0150	0433271355	
11 22103 0319	F00BJ00056		51 10102 0155	0433271365	
51 10100 6031	0432131628		51 10102 0172	0433271435	
51 10100 6046	0432131622		51 10102 0193	0433271773	
51 10100 6071	0432133796		51 10102 0261	0432131628	
51 10100 7363	0432131788	0986430312	51 11103 7420	0402619801	
51 10100 7364	0432133855	0986430313	51 11103 7456	0402610806	
51 10100 7368	0432131779		51 11103 7541	0402796205	
51 10100 7377	0432131820	0986430257	51 11103 7617	0401646003	
51 10100 7386	0432133841		51 11103 7621	0402796209	
51 10100 7387	0432133840		51 11103 7653	0402796211	
51 10100 7390	0432131733		51 11103 7668	0402796210	
51 10100 7391	0432133842		51 11103 7673	0402890301	
51 10100 7437	0432133797		51 11103 7682	0401490001	
51 10101 6041	0430233022		51 11103 7700	0401616002	
51 10101 7264	0432231795		51 11103 7740	0445020018	0986437353
51 10101 7274	0432231778	0986430159	51 11103 7745	0402810800	
51 10101 7310	0432131853	0986430196	51 11103 7807	0445020082	
51 11103 7808	0445020103		51 12101 7043	0440008005	



Application Guide

Engine series	Engine	OEM number	IAM number	Product
D 0800-Serie	D 0836 LE 508	51 10100 6071	0432133796	Nozzle-and-holder assembly
	D 0836 LE 510	51 10100 6071	0432133796	Nozzle-and-holder assembly
	D 0836 LE 510	51 10100 7386	0432133841	Nozzle-and-holder assembly
	D 0836 LF01	51 10100 6071	0432133796	Nozzle-and-holder assembly
	D 0836 LF05	51 10100 7437	0432133797	Nozzle-and-holder assembly
	D 0836 LFL03	51 10100 6071	0432133796	Nozzle-and-holder assembly
		51 10100 7437	0432133797	Nozzle-and-holder assembly
D 2500-Serie	D 2530 ME	51 10102 0125	0433271285	Nozzle
	D 2530 MTE	51 10102 0143	0433271296	Nozzle
	D 2538 MTE	51 10102 0143	0433271296	Nozzle
	D 2540 MLE	51 10102 0172	0433271435	Nozzle
	D 2542 MTE	51 10102 0155	0433271365	Nozzle
	D 2565 ME	51 10102 0150	0433271355	Nozzle
D 2800-Serie	D 2840 LE	51 10101 7274	0432231778	Nozzle-and-holder assembly
		51 10101 6041	0430233022	Nozzle-holder assembly
		51 10102 0193	0433271773	Nozzle, diesel
	D 2840 LE 201	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2840 LE 203	51 11103 7420	0402619801	Injector pump assembly
	D 2842 LE	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2842 LE 201	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2842 LE 203	51 11103 7456	0402610806	Injector pump assembly
	D 2842 LE 211	51 10100 6046	0432131622	Nozzle-and-holder assembly
	D 2842 LE 212	51 10100 6046	0432131622	Nozzle-and-holder assembly
	D 2842 LE 21	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2842 LXF	51 10101 7315	0432131857	Nozzle-and-holder assembly
	D 2842 LZE 41	51 10101 7315	0432131857	Nozzle-and-holder assembly
	D 2842 ME	51 10101 7264	0432231795	Nozzle-and-holder assembly
	D 2842 V8	51 11103 7760	F00BC00128	LE MCRS Pump
	D 2842 V10	51 11103 7761	F00BC00127	LE MCRS Pump
	D 2842 V12	51 11103 7762	F00BC00126	LE MCRS Pump
	D 2848 LE	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2848 LE 401	51 10101 7315	0432131857	Nozzle-and-holder assembly
	D 2848 LXE 40	51 10101 7315	0432131857	Nozzle-and-holder assembly
D 2865 LF01	51 10101 7338	0432131831	Nozzle-and-holder assembly	
D 2865 LF10	51 10101 7338	0432131831	Nozzle-and-holder assembly	



Application Guide

Engine series	Engine	OEM number	IAM number	Product
D 2800-Serie	D 2865 LFR	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2865 LXF	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2865 LXFR	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2866 KU/330	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 KU/360	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 KUL/330	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LE	51 10101 7274	0432231778	Nozzle-and-holder assembly
		51 10101 7338	0432131831	Nozzle-and-holder assembly
	D 2866 LE 401	51 10100 7368	0432131779	Nozzle-and-holder assembly
	D 2866 LFG04	51 10101 7338	0432131831	Nozzle-and-holder assembly
	D 2866 LFG05	51 10100 7363	0432131788	Nozzle-and-holder assembly
	D 2866 LFZR/290	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LFZR/330	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LH01	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LH02	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2866 LOH02	51 10101 7310	0432131853	Nozzle-and-holder assembly
	D 2866 LU	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LUH	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D2866 LUH21	51 11103 7541	0402796205	Injection pump assembly
	D 2866 LUL/290	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LXE	51 10101 7338	0432131831	Nozzle-and-holder assembly
	D 2866 LXE 40	51 10101 7338	0432131831	Nozzle-and-holder assembly
	D 2866 TE	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 TUE	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 TUM	51 10101 7274	0432231778	Nozzle-and-holder assembly
	D 2866 LUH25	51 11103 7653	0402796211	Injection pump assembly
	D 2876 LOH01	51 10100 7390	0432131733	Nozzle-and-holder assembly
	D 2876 LE 201	51 11103 7700	0401616002	Injection pump assembly
	D 2842 LE 102	51 10102 0261	0432131628	Nozzle-and-holder assembly
	D 2842 LE 103	51 10102 0261	0432131628	Nozzle-and-holder assembly
	D 2842 LE 211	51 11103 7745	0402810800	Injection pump assembly
D 2842 LE 212	51 11103 7745	0402810800	Injection pump assembly	
D 2842 LE 213	51 11103 7745	0402810800	Injection pump assembly	



Application Guide

Engine series	Engine	OEM Number	IAM Number	Product
D 2800-Serie	D 2842 LE 404	51 11103 7673	0402890301	Injection pump assembly
	D 2842 LE 602	51 10100 6031	0432131628	Nozzle-and-holder assembly
		51 11103 7682	0401490001	Injection pump assembly
	D 2866 LE 405	51 11103 7617	0401646003	Injection pump assembly
	D 2868 LE 421	51 11103 7808	0445020103	High-pressure pump, CR
	D 2868 LE 426	51 11103 7808	0445020103	High-pressure pump, CR
	D 2868 LE 436	51 11103 7808	0445020103	High-pressure pump, CR
	D 2868 LE 421	51 11103 7807	0445020082	High-pressure pump, CR
	D 2868 LE 426	51 11103 7807	0445020082	High-pressure pump, CR
				High-pressure pump, CR system
	D 2868 LE 436	51 11103 7807	0445020082	High-pressure pump, CR
				High-pressure pump, CR system
	D 2876 LE 423	51 11103 7740	0445020018	High-pressure pump, CR
				High-pressure pump, CR system
	D 2876 LE 401	51 11103 7621	0402796209	Injection pump assembly
D 2876 LE 433	51 11103 7740	0445020018	High-pressure pump, CR	
D 2876 LE 436	51 11103 7740	0445020018	High-pressure pump, CR	
D 2876 LF 07	51 11103 7668	0402796210	Injection pump assembly	
R-Serie	R 6 V 16/18	11 22004 0054	0433250047	Nozzle
		51 12101 7043	0440008005	Fuel supply pump
	R 6 V 16/18 T	11 22004 0054	0433250047	Nozzle
		11 22004 0054	0433250047	Nozzle
	R 6 V 16/18 TL	51 12101 7043	0440008005	Fuel supply pump
		51 12101 7043	0440008005	Fuel supply pump
	R 8 V 16/18	11 22004 0054	0433250047	Nozzle
		51 12101 7043	0440008005	Fuel supply pump
R 8 V 16/18 T	51 12101 7043	0440008005	Fuel supply pump	
R 8 V 16/18 TL	11 22004 0054	0433250047	Nozzle	
V-Serie	V 6 V 16/18	11 22004 0054	0433250047	Nozzle
		51 12101 7043	0440008005	Fuel supply pump
	V 6 V 16/18 T	11 22004 0054	0433250047	Nozzle
		51 12101 7043	0440008005	Fuel supply pump



Application Guide

Engine series	Engine	OEM number	IAM number	Product	
20/27 Serie	20/27	11 20008 0043	0414971032	Injection pump PF	
		11 20008 0051	0414971036	Injection pump PF	
	20/27 HF	11 22103 0077	0431216003	Nozzle-holder assembly	
28/33D Serie	16 V 28/33 D	11 20008 0123	F00BL0P134	Injection pump, diesel	
32/40 Serie	32/40 DG		F00BL0J047	Nozzle-holder assembly	
		11 22103 0106	F00BL0J043	Nozzle-holder assembly	
51/60 Serie	6 L 51/60 DF	11 20408 0011	F00BC00111	High-pressure pump, CR system	
		11 22103 0319	F00BJ00056	Injector, CR system	
	7 L 51/60 DF	11 20408 0011	F00BC00111	High-pressure pump, CR system	
		11 22103 0319	F00BJ00056	Injector, CR system	
	8 L 51/60 DF	11 20408 0011	F00BC00111	High-pressure pump, CR system	
		11 22103 0319	F00BJ00056	Injector, CR system	
	9 L 51/60 DF	11 20408 0011	F00BC00111	High-pressure pump, CR system	
		11 22103 0319	F00BJ00056	Injector, CR system	
	V 51/60 DF	11 20501 0013	F00BC00112	High-pressure pump, CR system	
		11 22103 0319	F00BJ00056	Injector, CR system	
	D 0800-Serie	D 0824 LOH02	51 10101 7349	0432131820	Nozzle-and-holder assembly
		D 0824 LOH05	51 10101 7349	0432131820	Nozzle-and-holder assembly
D 0826 GF 03		51 10101 7339	0432133872	Nozzle-and-holder assembly	
D 0826 LE 527		51 10100 7377	0432131820	Nozzle-and-holder assembly	
D 0826 LE 531		51 10100 7377	0432131820	Nozzle-and-holder assembly	
D 0826 LE 533		51 10100 7377	0432131820	Nozzle-and-holder assembly	
D 0826 LF 09		51 10101 7349	0432131820	Nozzle-and-holder assembly	
D 0826 LOH 17		51 10100 7364	0432133855	Nozzle-and-holder assembly	
		51 10100 7391	0432133842	Nozzle-and-holder assembly	
D 0826 LOH 18		51 10100 7386	0432133841	Nozzle-and-holder assembly	
		51 10100 7387	0432133840	Nozzle-and-holder assembly	
D 0836 LE 505		51 10100 6071	0432133796	Nozzle-and-holder assembly	
		51 10100 7437	0432133797	Nozzle-and-holder assembly	
D 0836 LE 506		51 10100 6071	0432133796	Nozzle-and-holder assembly	
		51 10100 7437	0432133797	Nozzle-and-holder assembly	
D 0836 LE 507	51 10100 6071	0432133796	Nozzle-and-holder assembly		
	51 10100 7437	0432133797	Nozzle-and-holder assembly		